


Cosmo

Adjustment and maintenance

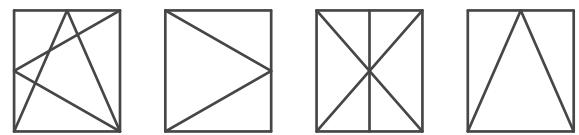


Contents

01. Adjustment	2
Link arm	2
Bottom hinge	4
Top hinge for side hung window	5
Hinge for tilt window	6
Eccentric locking cam at top bolt	7
Eccentric locking cam at bottom bolt	8
Gasket pressure adjustment french casement keeps	9
Anti slam shut device	11
02. Maintenance and lubrication	13
General	13
Main leaf	14
Slave leaf	15
Top hinge / Link arm	16
Bottom hinge	17

Legend

 - Position and reference side
- Translation movement
- Rotation movement
- Correct
- Not correct
- Point of attention

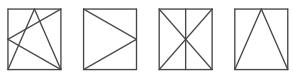

COSMO ADJUSTMENT AND MAINTENANCE




01. Adjustment > Link arm

 
01. Adjustment

Link arm



Horizontal adjustment

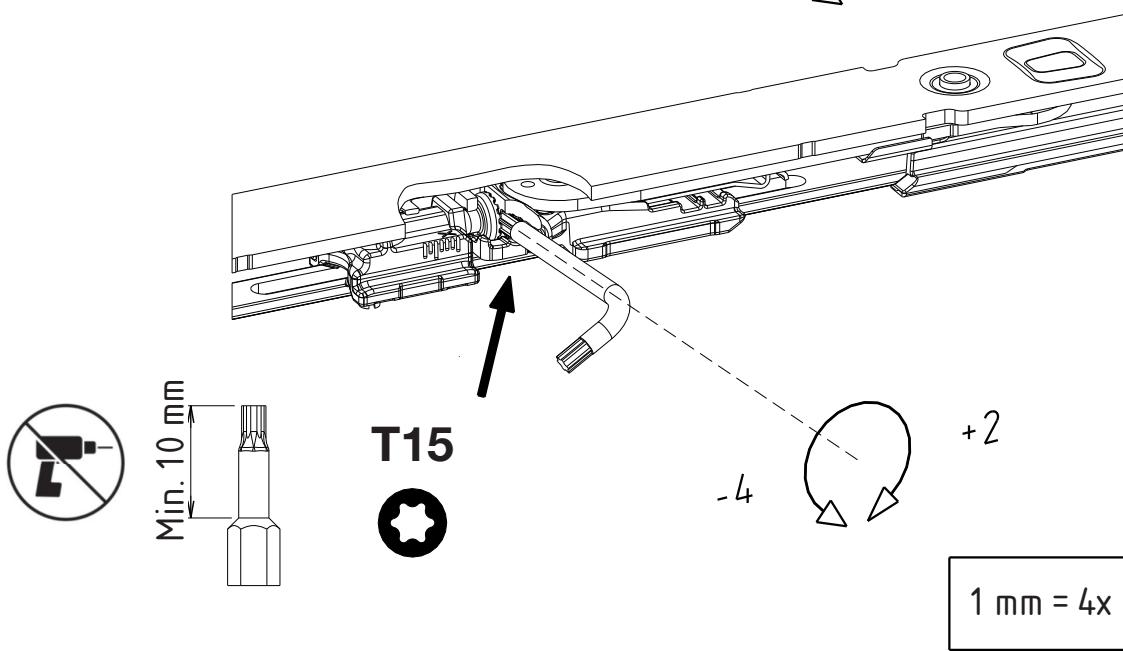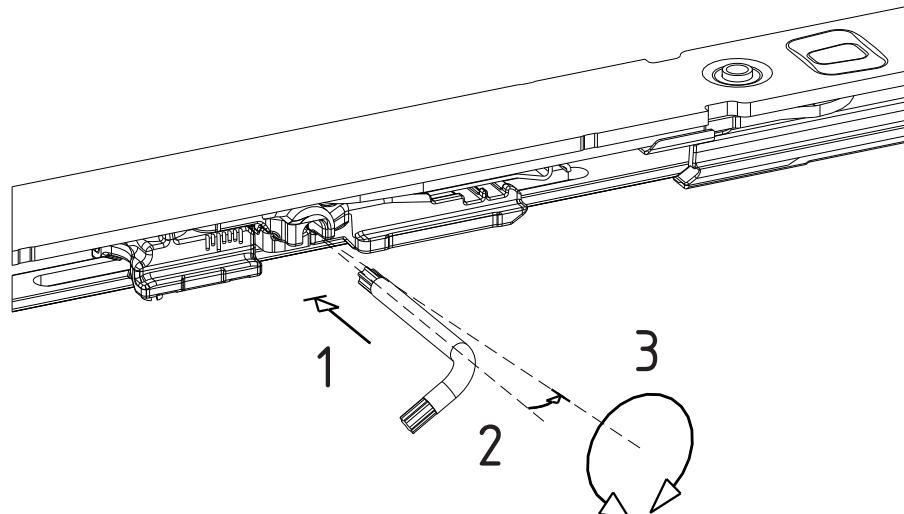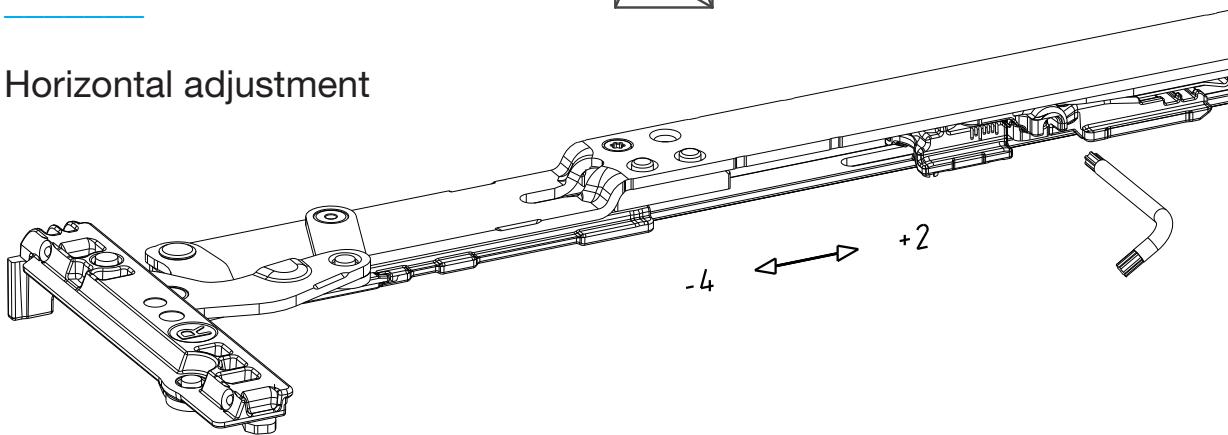


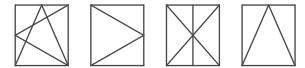



01. Adjustment > Link arm

COSMO ADJUSTMENT AND MAINTENANCE




 Gasket pressure adjustment

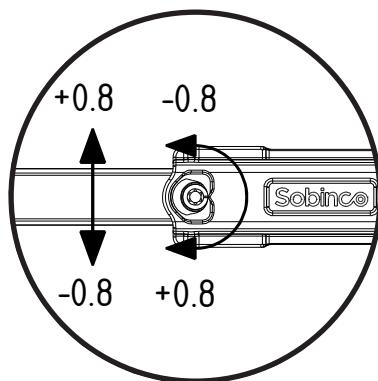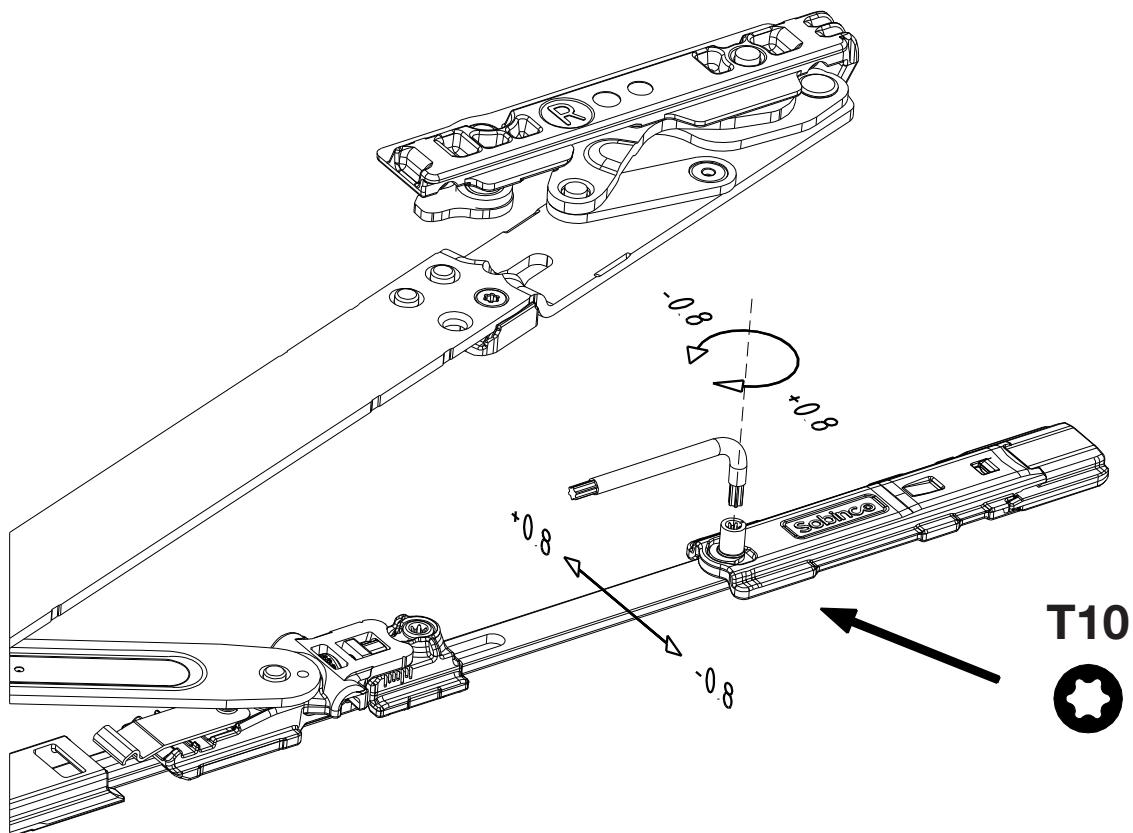


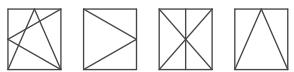**COSMO ADJUSTMENT AND MAINTENANCE**


01. Adjustment > Bottom hinge

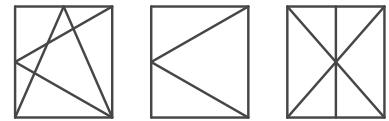
Bottom hinge

Vertical adjustment

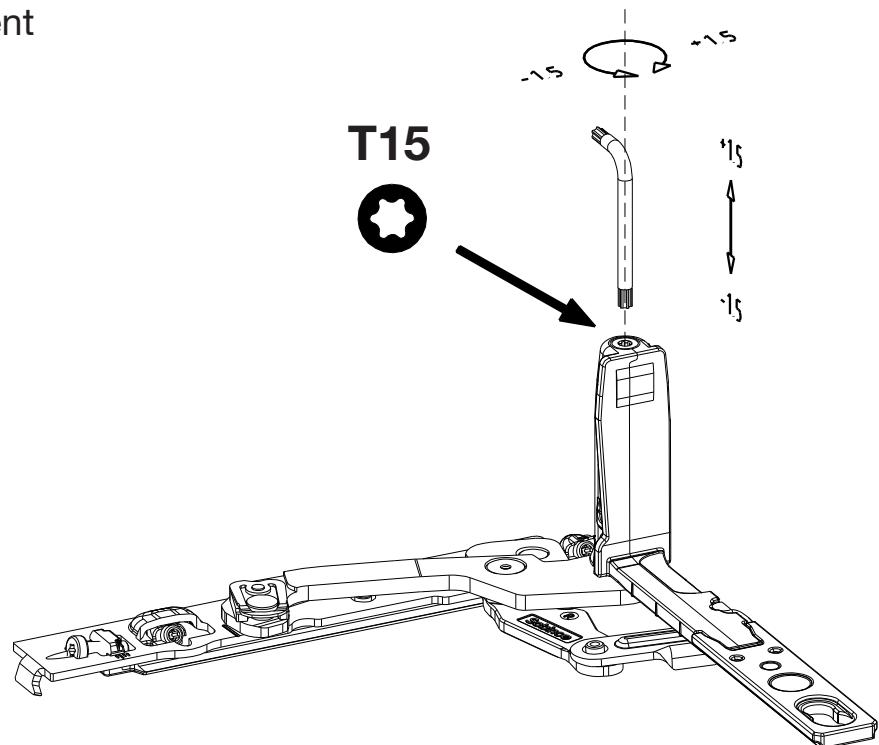

Horizontal adjustment




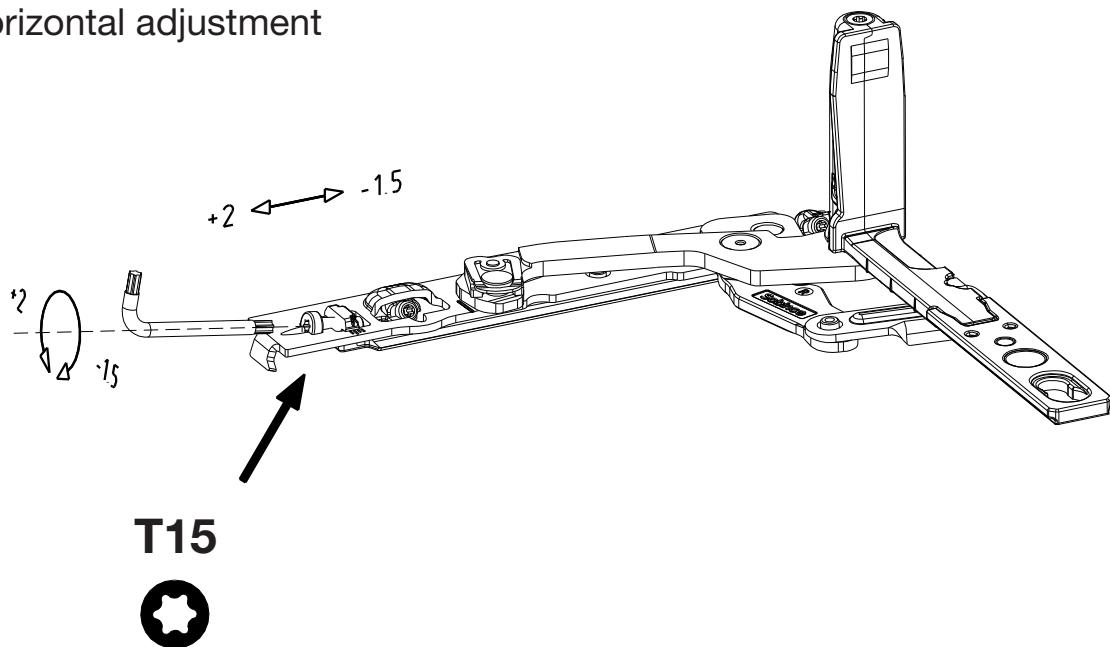


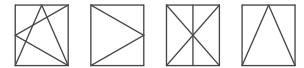 


01. Adjustment > Top hinge for side hung window

COSMO ADJUSTMENT AND MAINTENANCE**Top hinge for side hung window**

 Horizontal adjustment

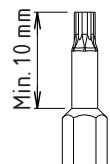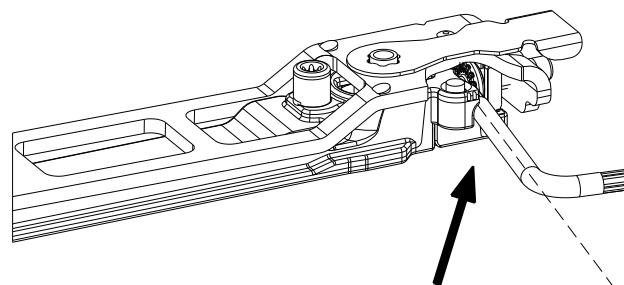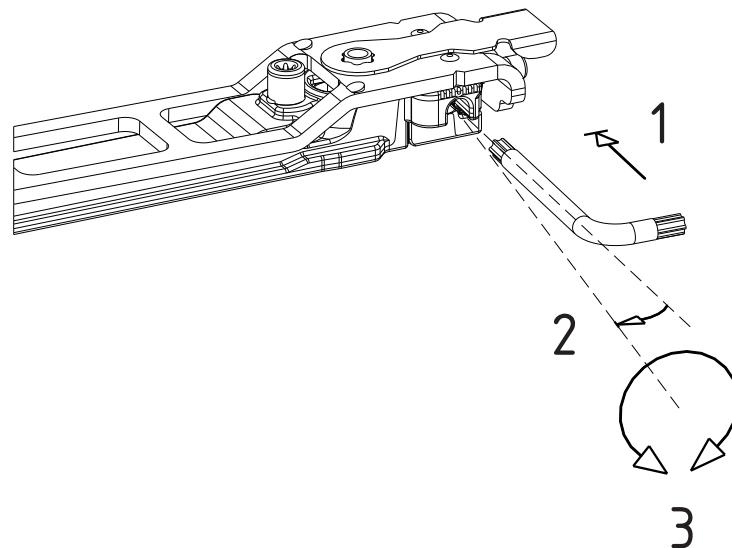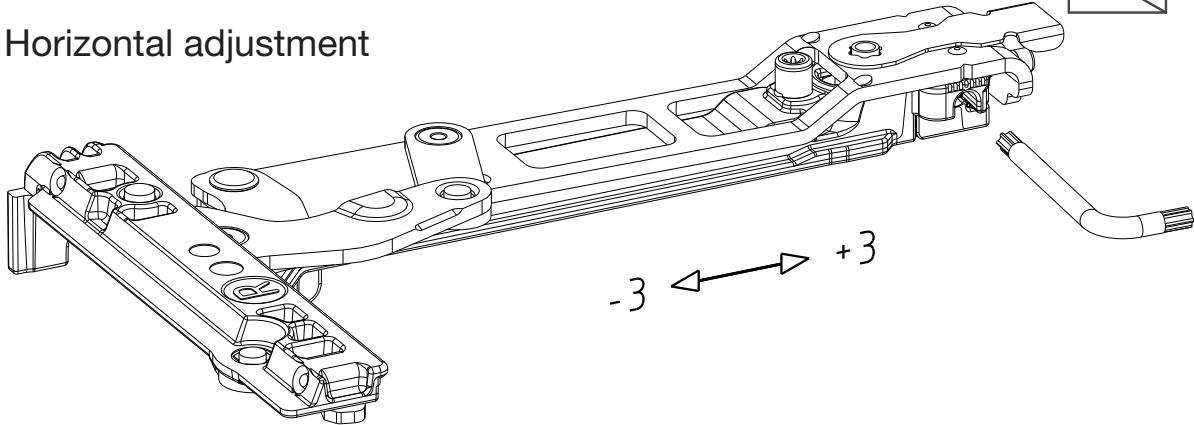**T15****-3****+3****1 mm = 4x 360°**

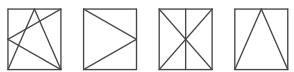 


COSMO ADJUSTMENT AND MAINTENANCE

01. Adjustment > Hinge for tilt window


Hinge for tilt window



Vertical adjustment

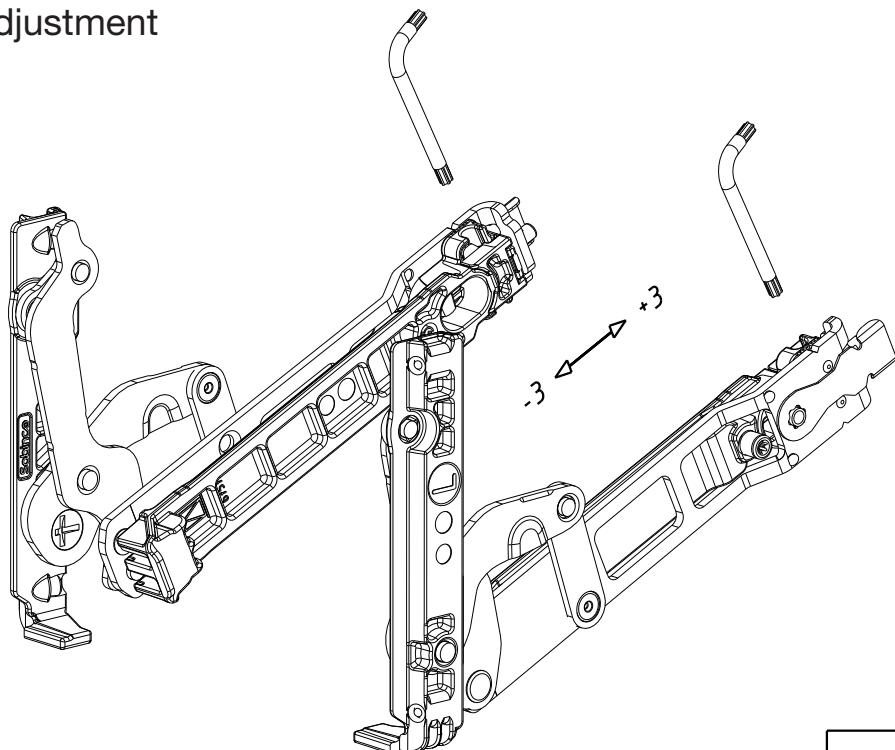


1 mm = 4x

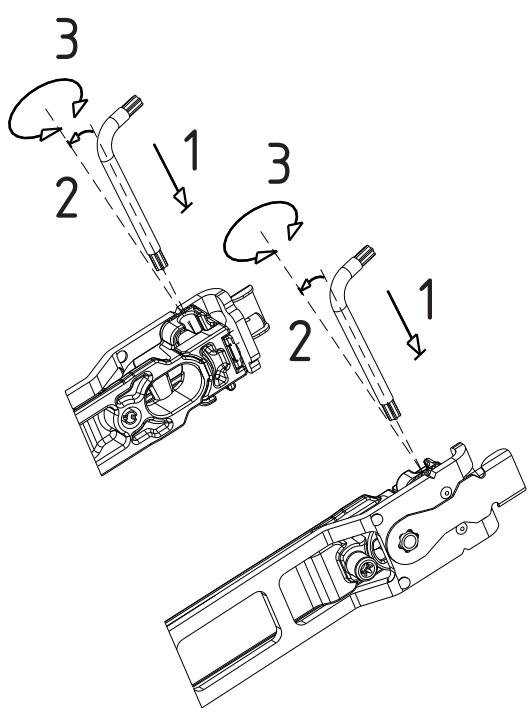


T15




 Min. 10 mm

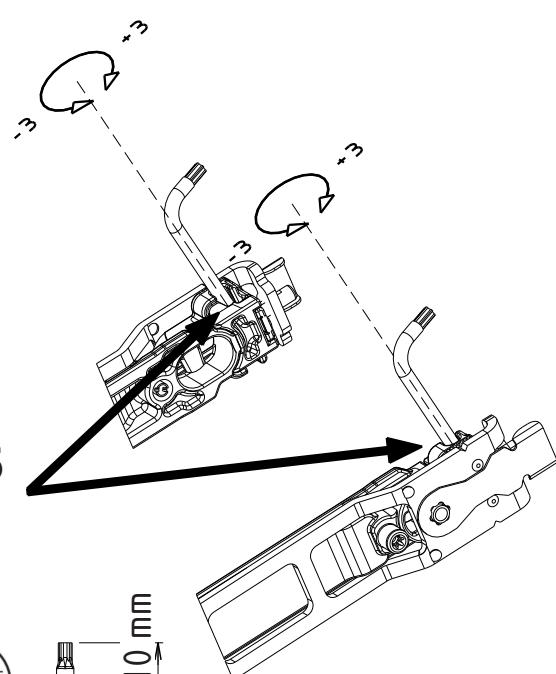


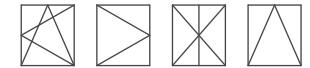

 
01. Adjustment > Eccentric locking cam at corner

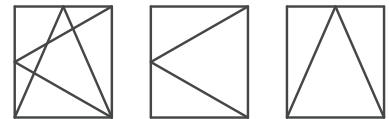
COSMO ADJUSTMENT AND MAINTENANCE**Eccentric locking cam at top bolt**

Top bolt

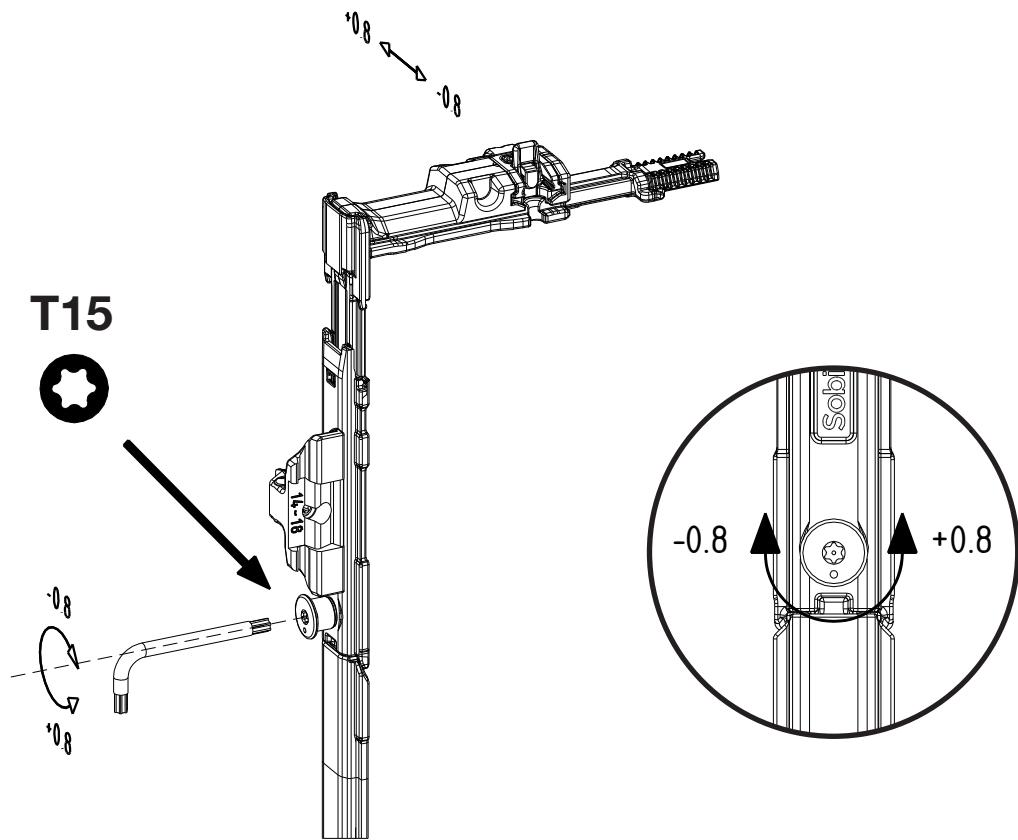


Optional locking cam


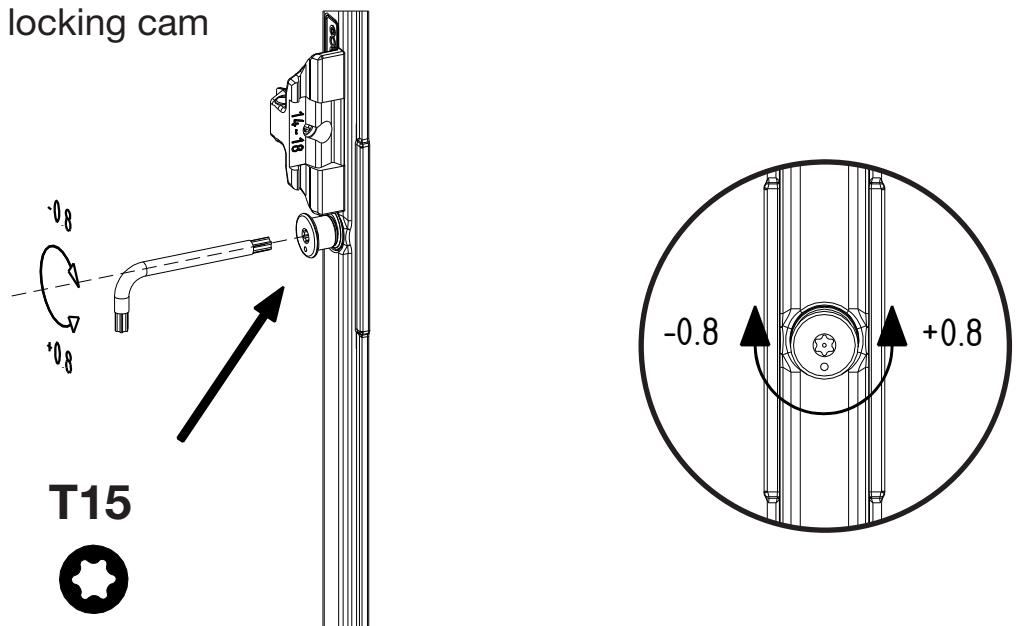


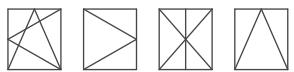 **COSMO ADJUSTMENT AND MAINTENANCE**



01. Adjustment > Eccentric locking cam at bolt

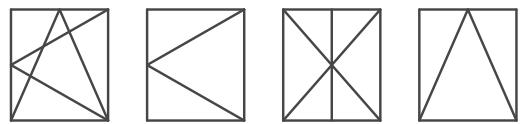
Eccentric locking cam at bottom bolt

Optional locking cam

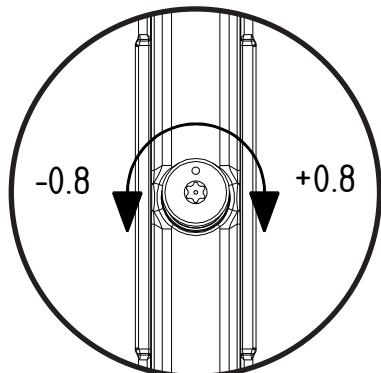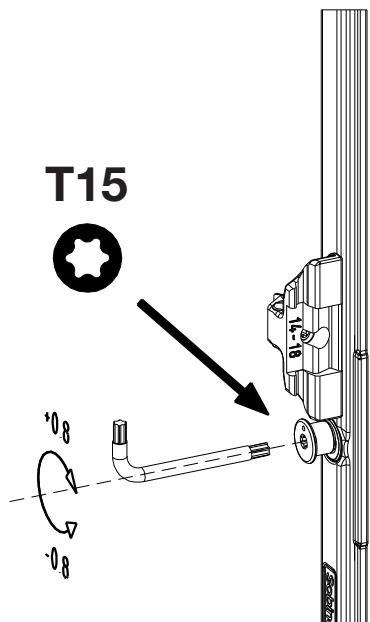

Bottom bolt

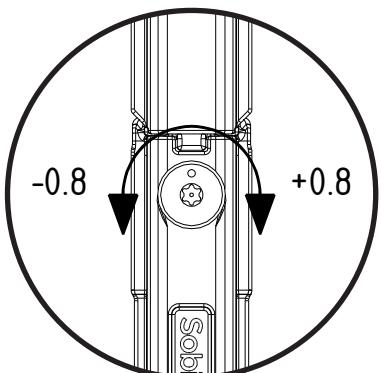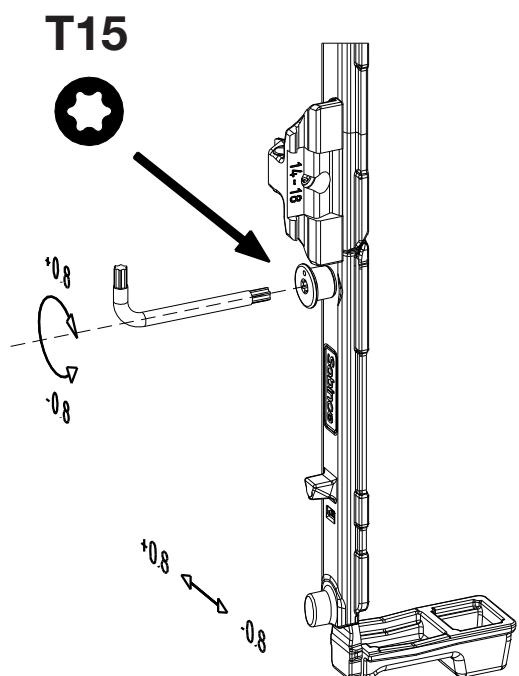


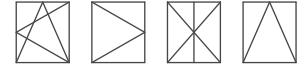 



01. Adjustment > Gasket pressure adjustment
french casement keeps


COSMO ADJUSTMENT AND MAINTENANCE

 Gasket pressure adjustment french casement keeps

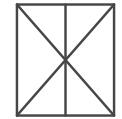


Bottom


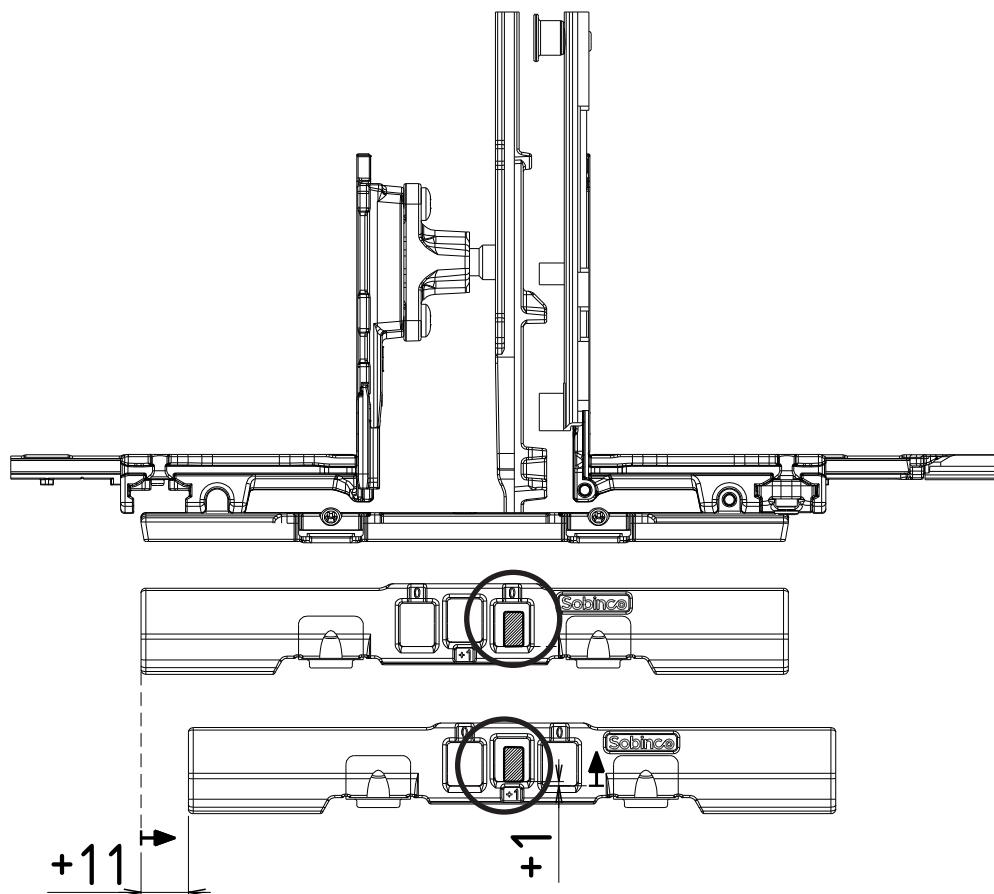
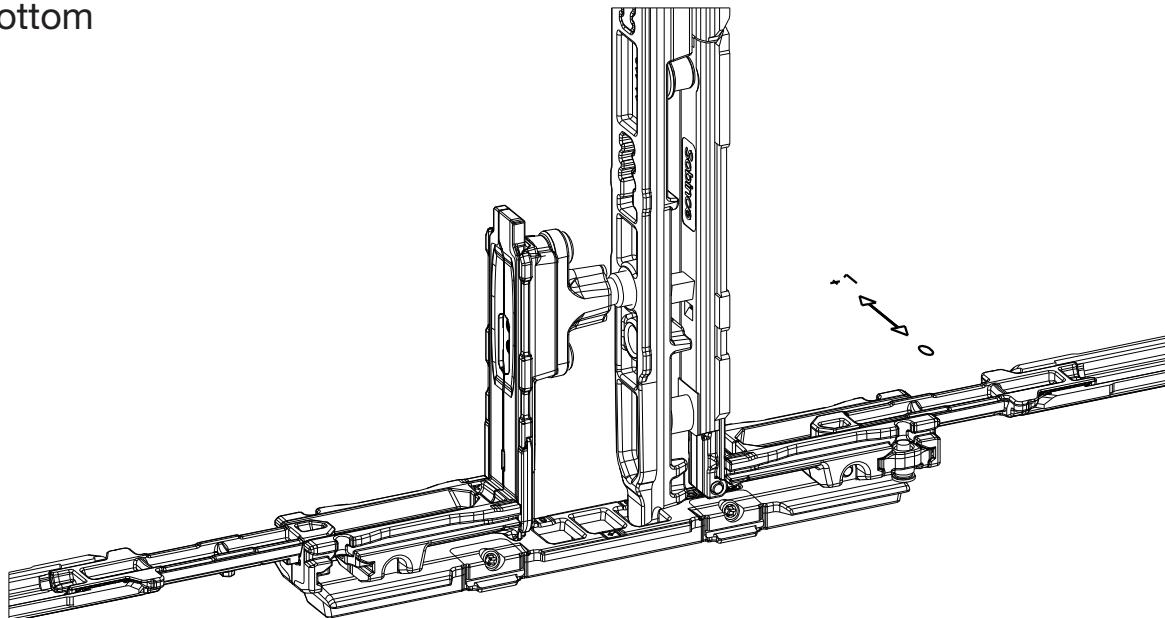


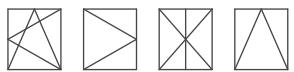 


COSMO ADJUSTMENT AND MAINTENANCE



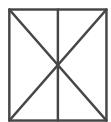 
01. Adjustment > Gasket pressure adjustment
french casement keeps

 Top

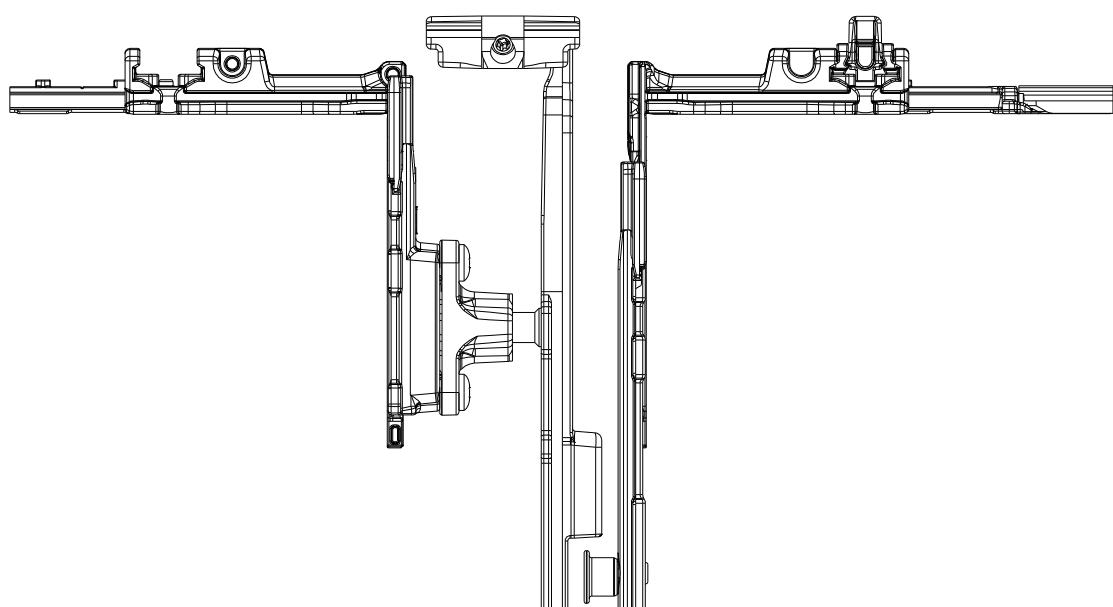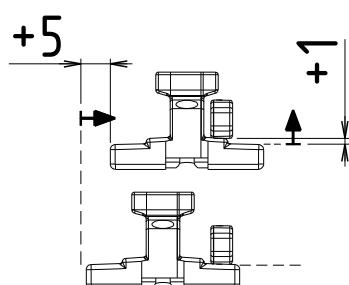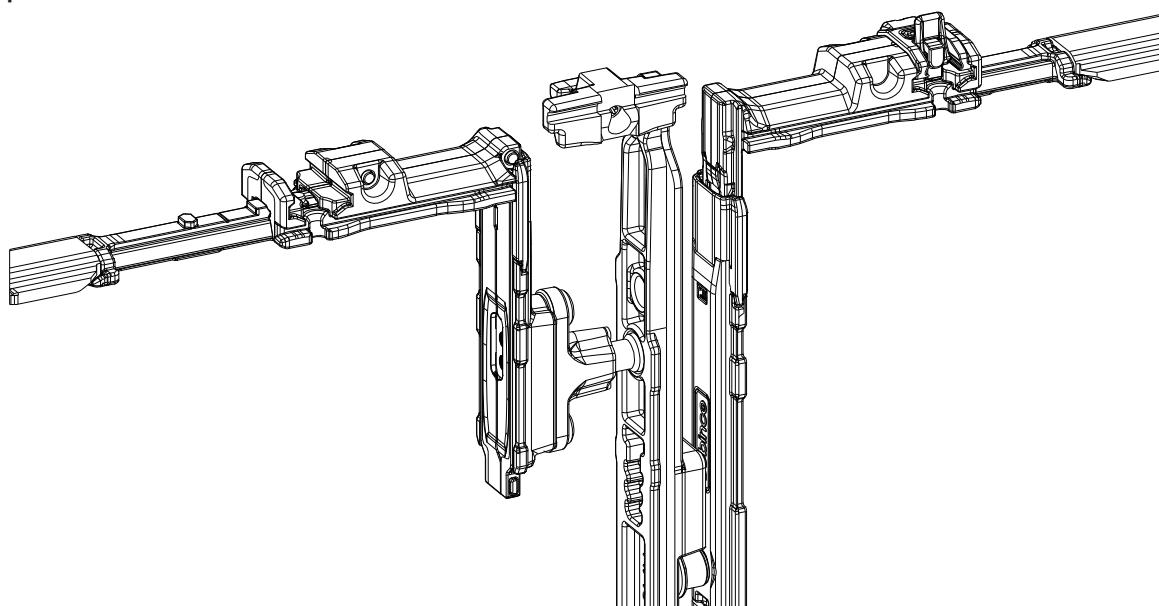


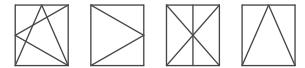

Anti slam shut device

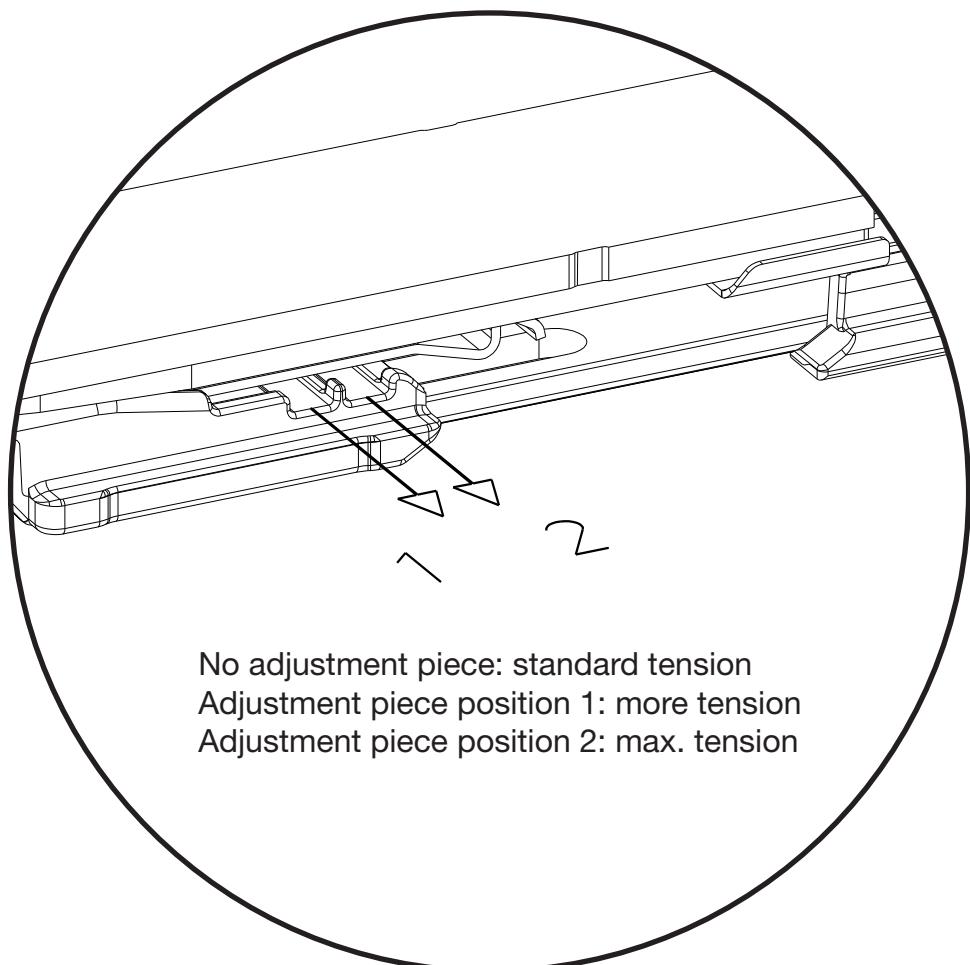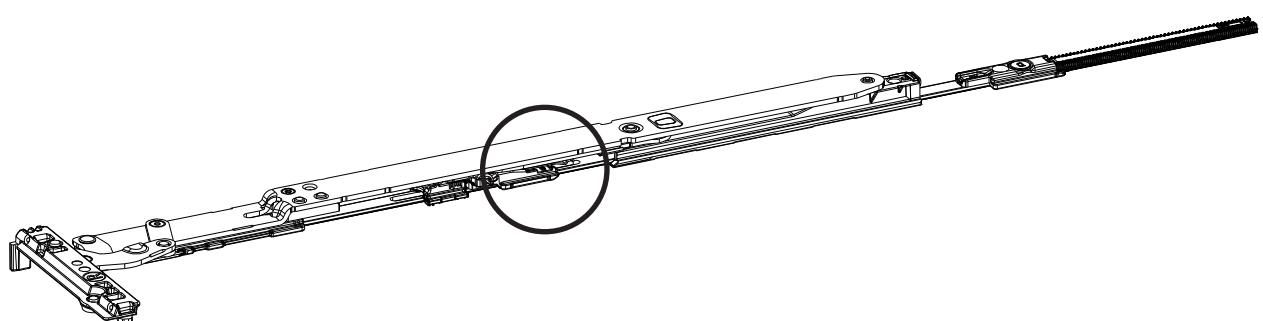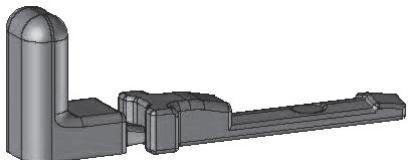

 No adjustment piece: standard tension
Adjustment piece position 1: more tension
Adjustment piece position 2: max. tension

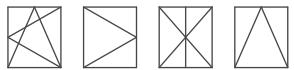


COSMO ADJUSTMENT AND MAINTENANCE

01. Adjustment > Anti slam shut device




Illustrated: position 1


1.

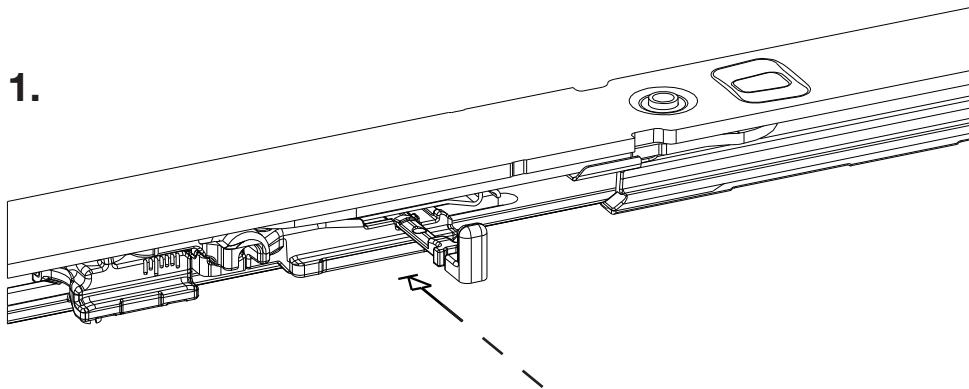

2.

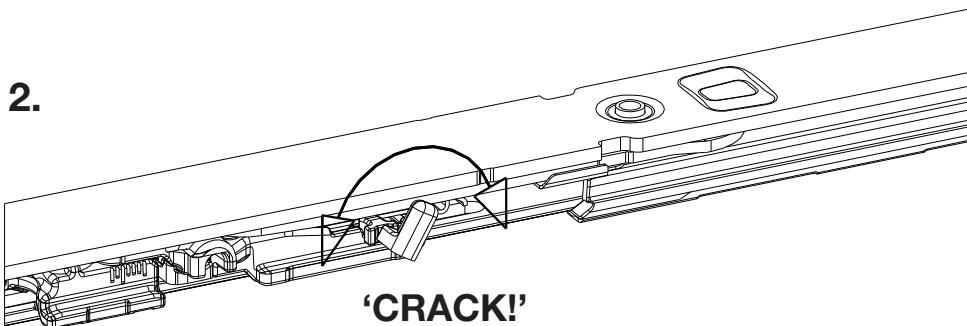


3.

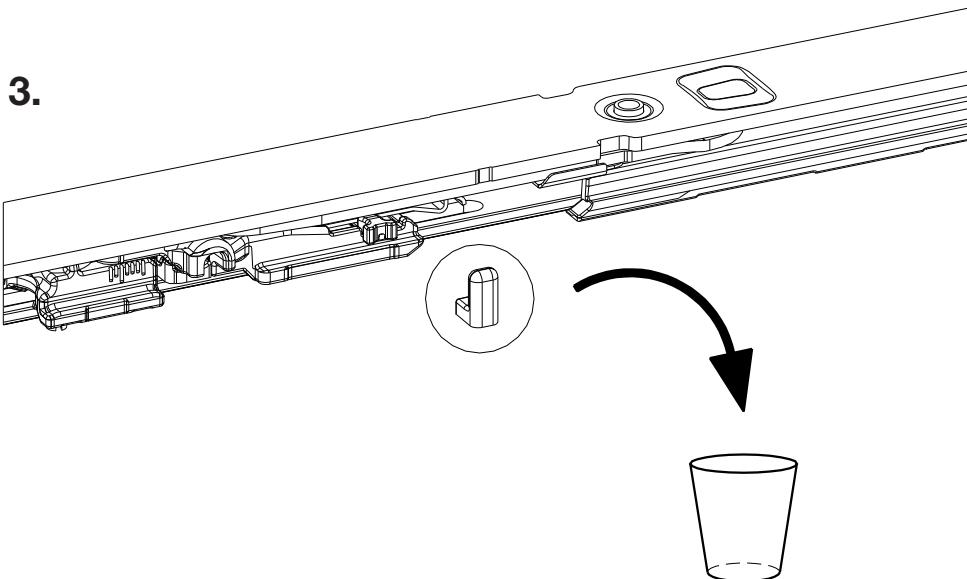



02. Maintenance and lubrication

 General

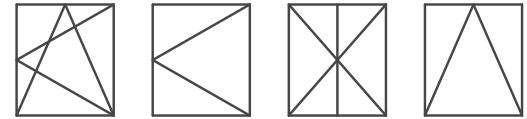

1. Cleaning

- When necessary any dust and dirt must be removed from all components as this could affect the smooth operation of the system.
- The system must not be cleaned with water and/or other cleaning products as this could affect the lubricants and the corrosion resistance of the gear.

2. Adjustments

 
- All gear adjustments, especially of the hinges and the link arm, the replacement of parts and installation and removing of the vents should be carried out by a window expert.

3. Lubrication

- The corner transmission, the lockcase and the hinges are greased during manufacture and therefore no additional lubrication is necessary.
- When operating the window the first time, it is required to lubricate the locking points with grease.
- If the window weighs more than 130 kg, the hinges must be lubricated annually.
- Hinges for tilt windows and turn windows are lubricated in a similar way.

4. Checking



- Check tightness of link arm, handle, hinges and keep screws.

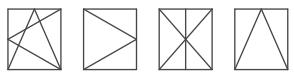

COSMO ADJUSTMENT AND MAINTENANCE


02. Maintenance and lubrication > Main leaf


Main leaf

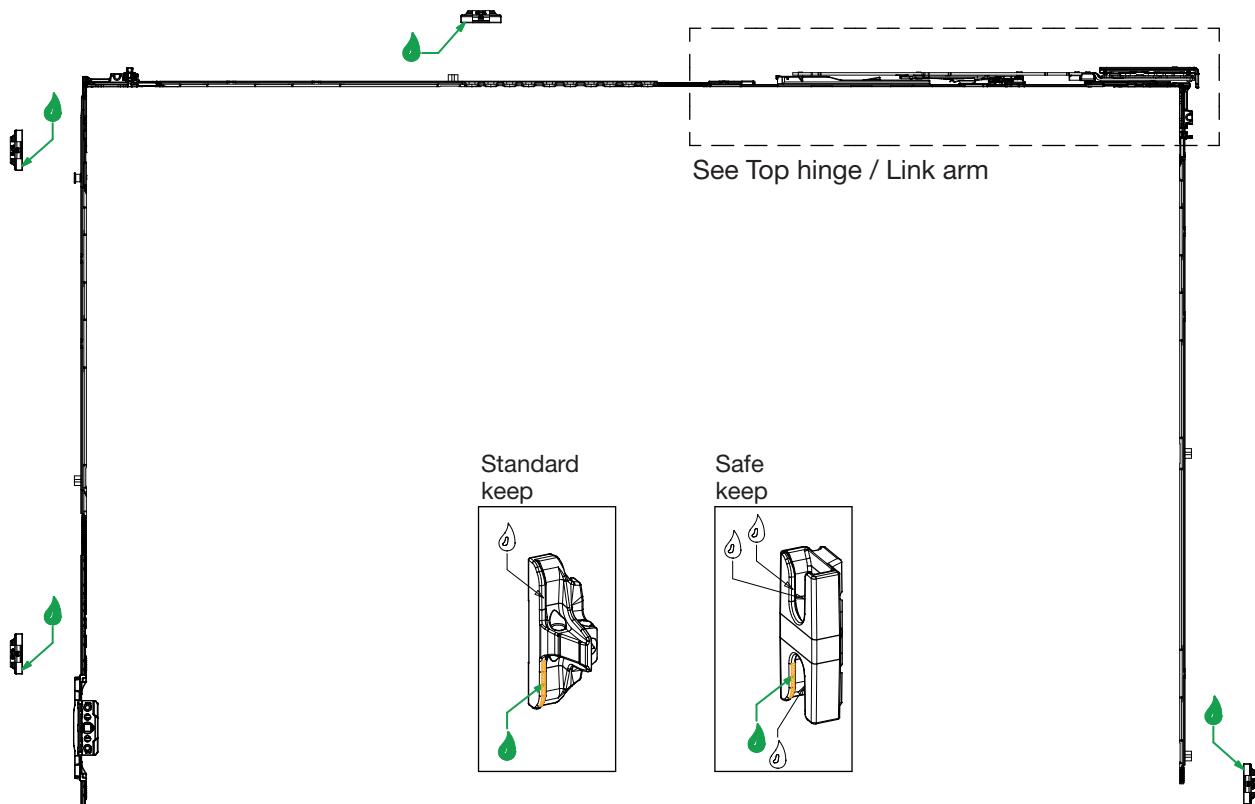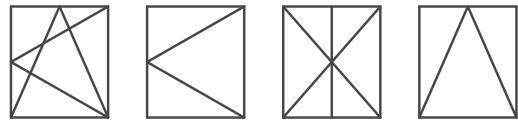



● Lubrication (this drawing)
● Lubrication (other places)
— Lubrication area on the keep

 Place = depends on:
- the position of the locking cam
- direction of window: left hand/right hand

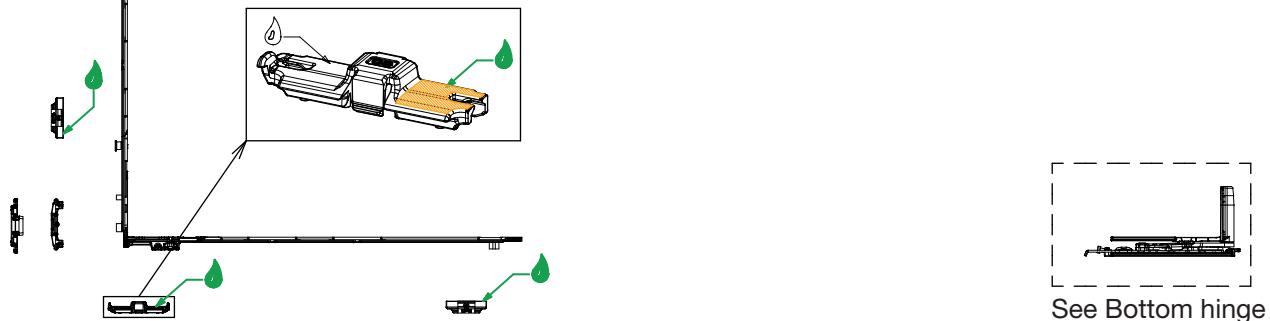

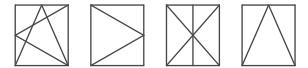

Slave leaf

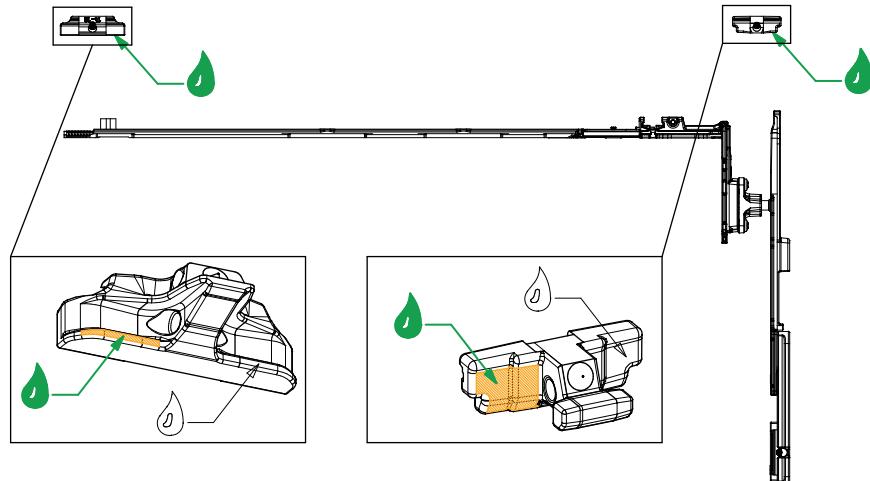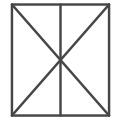 


Lubrication (this drawing)




Lubrication (other places)

 Lubrication area on the keep

 Place = depends on direction of window (left hand or right hand)


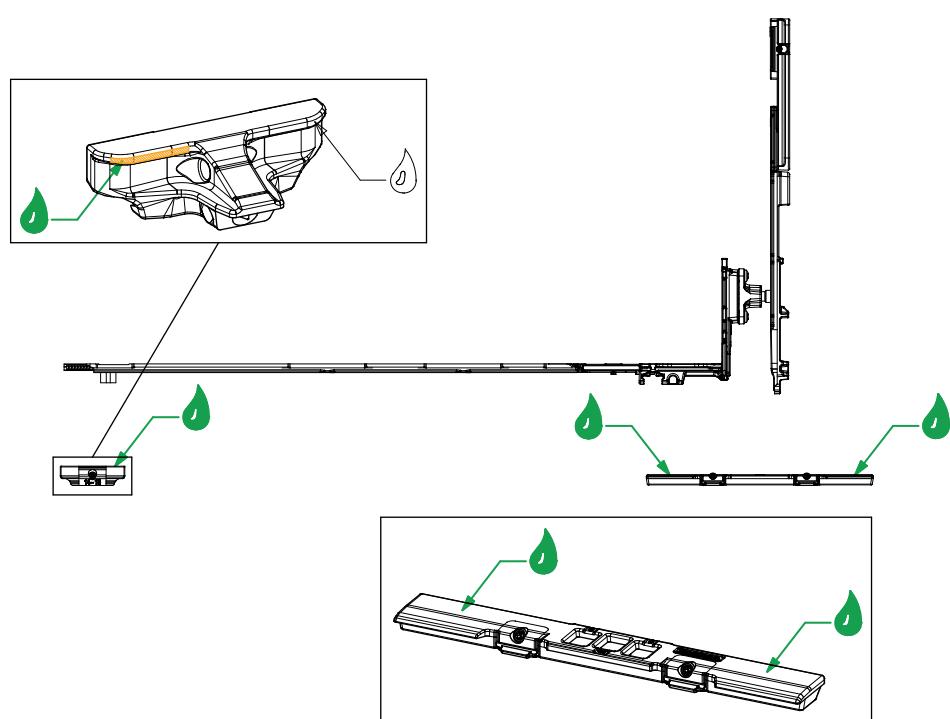


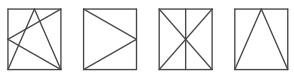


COSMO ADJUSTMENT AND MAINTENANCE


02. Maintenance and lubrication > Top hinge / Link arm

 Top hinge / Link arm

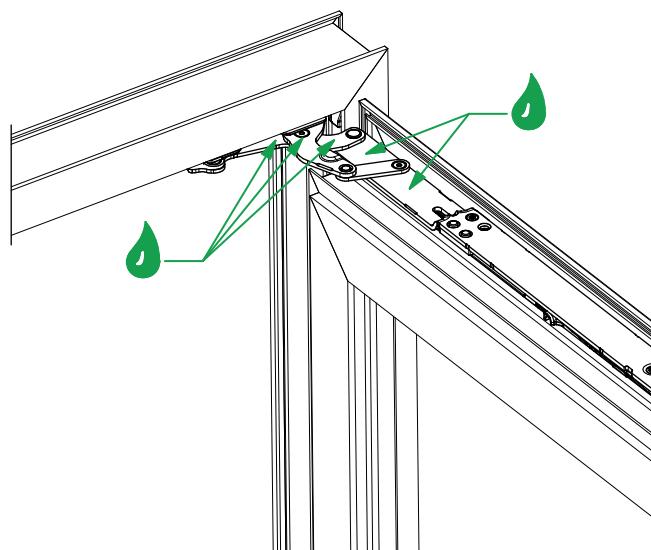
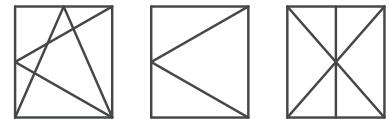


Lubrication

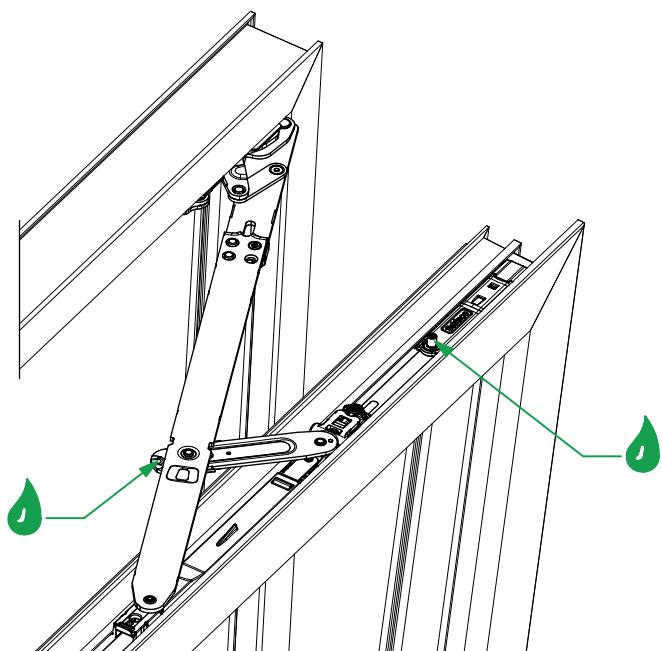

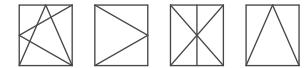 

Bottom hinge

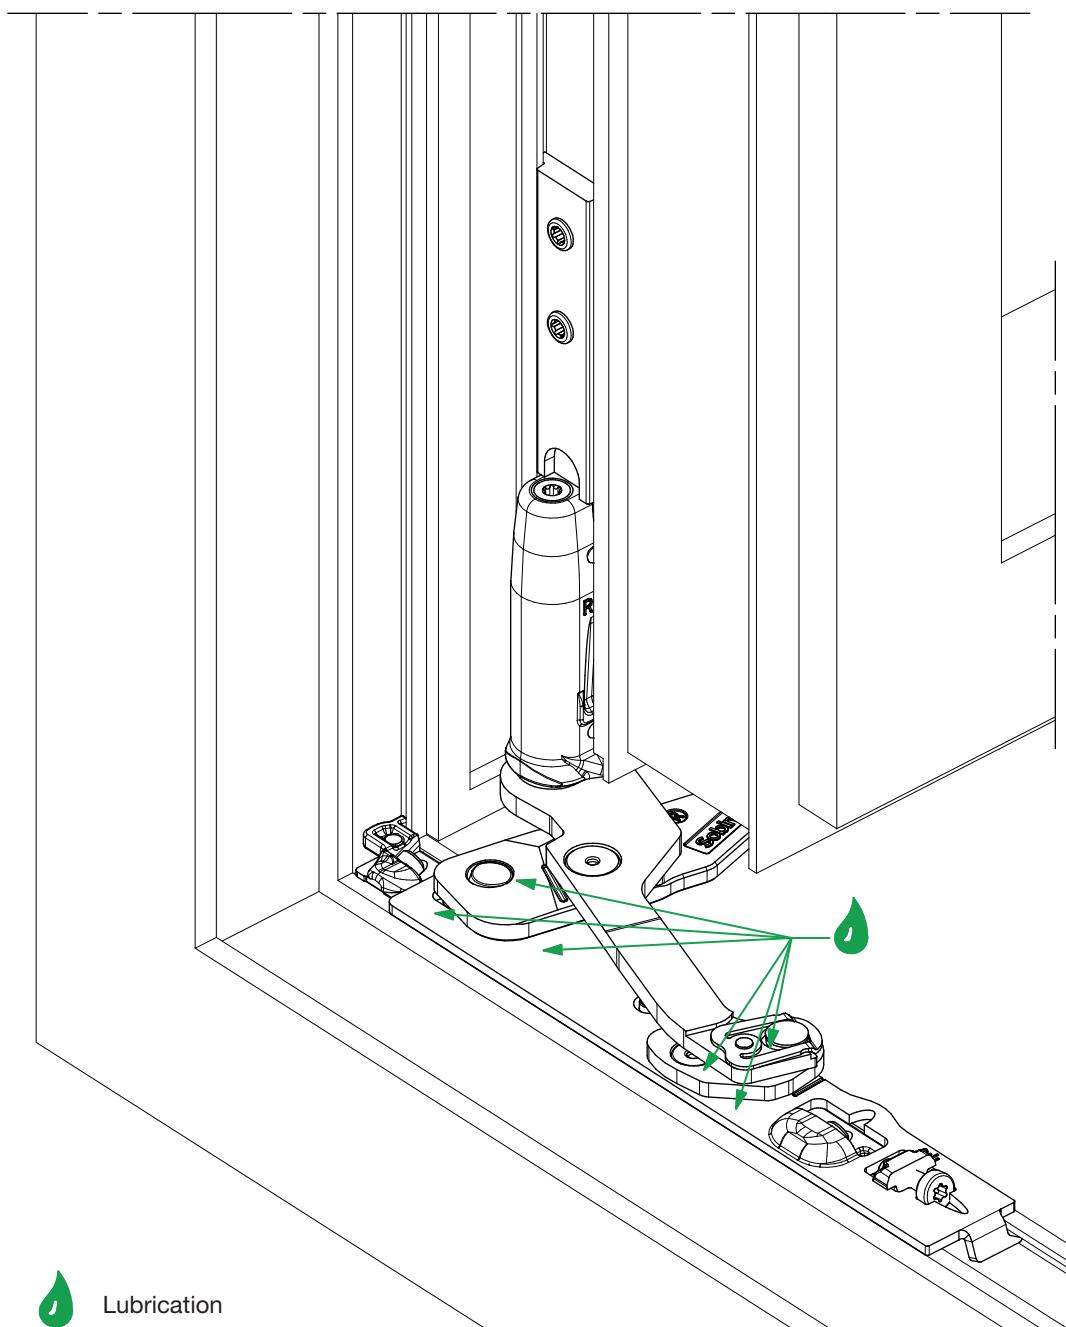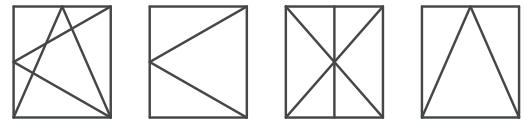 

Lubrication

